

## SST Cross Reference

<b>Older or Changed Number</b>	<b>New number or reason for change</b>
0757A-38510	Use TKLE 187A
09188-38000	This tool is not supported - Spark plug socket
09200-38001	Use 0K201 170 AA0A
09212-M2000	Use 09212-32000
09212-M2100	Use 09212-32100
09214-M2001	Use 09214-32000
09214-M2100	Use 09214-32100
09216-21100	This tool is not supported - Mount bushing installer
09216-22100	This tool is not supported
09221-21000	This tool is not supported
09221-22000A	Use 09221-3F100
09221-29000	Use 09221-3F100
09221-32001	This tool is not supported
09221-4A000	This tool is not supported - Torque Angle Adaptor
09221-M2000	Use 09221-21000
09221-M2000	Use 09221-21000
09221-M2001	This tool is not supported
09221-M2100	Use 09221-21100
09222-21200 A/B	This tool is not supported
09222-28100	Adapter - Comes with 09222-28000
09222-32100	This tool is not supported - Valve & PS seal installer
09222-3K000	Use 09222-3K000A
09222-M2200A/B	This tool is not supported
09231-33100	This tool is not supported - Crankshaft turning socket
09231-M2000	Use 09231-21000
09260-32000	This tool is not supported - Oil sender socket
09261-2100	This tool is not supported - Mount bushing installer
09263-38000	Use 09263-3C100A
09263-3C100	Use 09263-3C100A
09280-4A000	This tool is not supported - O2 sensor socket
09310-2B200	Use TKET125A
09353-24000	Fuel pressure adaptor - This tool is not supported or needed
09353-24100	Use K99U-2200-E
09353-24100	K99U-2200-E
09353-38000	Use TKET104A or FPG2211-ADP
09353-38000	Use TKET104A or FPG2211-ADP
09373-27000	This tool is not supported - Alt puller remover
09414-11000	This tool is not supported - Lock pin extractor
09414-11100	This tool is not supported - Lock pin installer
09431-11000	This tool is not supported - PS seal installer
09431-22100	This tool is not supported
09432-11000	Puller - This tool is not supported
09432-21400	This tool is not supported - Taper bearing puller
09432-21600	This tool is not supported - PS bearing installer
09432-21601	This tool is not supported - PS bearing installer
09432-21701	This tool is not supported - AT bearing installer
09432-33100	This tool is not supported - Bearing installer
09432-33200	This tool is not supported - AT Bearing removing plate
09432-33800	This tool is not supported - AT bearing installer
09433-21000	This tool is not supported - AT Removing plate
09434-14200	This tool is not supported - PS bearing installer
09452-21001	This tool is not supported
09452-21002	This tool is not supported
09452-21401	This tool is not supported - Guide pin
09452-21500	This tool is not supported
09452-33100	This tool is not supported - Pump removers
09453-21000	This tool is not supported - AT spring compressor
09453-21100	This tool is not supported - AT spring compressor
09453-24000	This tool is not supported - AT spring compressor

09453-33100	This tool is not supported - AT Dial gauge extension
09455-21000	This tool is not supported Bearing / Gear puller
09455-21100	This tool is not supported - Bearing installer
09455-32200	This tool is not supported AT Seal puller
09455-33200	This tool is not supported - AT bearing installer
09456-39000	This tool is not supported - AT spring compressor
09456-39100A/B	This tool is not supported - AT clearance plate
09457-39000	This tool is not supported - AT socket
09478-26000	This tool is not supported - Seal installer
09478-26100	This tool is not supported - Back plate remover
09493-43000	This tool is not supported - C-Clamp - Universal joint remover
09495-3300	This tool is not supported - Bearing / gear puller
09495-33000	This tool is not supported - Bearing / gear puller
09495-3K000	Use 09495-3K000A
09517-21700	This tool is not supported - Diff yoke holder
09517-43001	Use 0K201 170 AA0A - Engine support
09517-43001	This tool is not supported - Bearing Puller
09517-43101	This tool is not supported - Diff carrier working base
09517-43401	This tool is not supported - Work base for diff
09517-43500	This tool is not supported - Adaptors
09526-11001	This tool is not supported - Axle Shaft Puller
09527-4A000	This tool is not supported - Bearing splitter
09529-21000	This tool is not supported - Wheel alignment adaptor/bushing installer
0953-11600	Use 09532-11600
09532-11000	This tool is not supported - Differential bearing installer
09532-31200 (B)	This tool is not supported - Oil seal installers
09532-32000	This tool is not supported - Oil seal installers
09532-32100 (B)	This tool is not supported - Oil seal installers
09542-4A000	Use 09542-4A000A
09546-2600	This tool is not supported - Strut Spring Compressor
09551-31000	This tool is not supported - Bushing installer
09552-38000	This tool is not supported - Bushing installer
09555-21000	This tool is not supported - PS oil seal installer
09561-11001	This tool is not supported Steering wheel puller
09561-11002	This tool is not supported
09565-11100	This tool is not supported - PS main shaft preload
09565-21000	This tool is not supported - PS bearing installer
09568-34000	Use 0K670-321-019 or Tie rod / ball joint separator from outside source
09568-4A000	Use 0K670 321 019 or Tie rod / ball joint separator from outside source
09571-21400	Use 09517-21400
09572-21000	Use K94A-5100-PS1
09572-21200	Use TKRT043A
09572-22000	Use TKRT043A
09572-22100	Use TKRT043A
09572-33100	Use TKRT043A
09573-21000	This tool is not supported - PS seal installer
09573-21100	This tool is not supported - PS Seal installer
09573-21200	This tool is not supported - Replace Assembly
09573-33000	This tool is not supported - PS seal installer
09573-33100	This tool is not supported - PS seal installer / guide
0957A-2D200	Use TKLE105A
0957A-2E110	Use TKLE187A
0957A-34100A	Use K95U-6000-BDY
0957A-38100	Use TKLE187A
0957A-38200	For some applications use TKZE041A
0957A-38400	Use TKZE041A Dummy
0957A-38500	Use TKLE 136A
0957A-38510	Use TKLE 187A
0957A-3F100	Use TKLE 113A
09580-34000	This tool is not supported - Rear brake piston adjuster
09624-34000	This tool is not supported - Bushing installer
09624-34000	This tool is not supported - Bushing installer
09624-38000	This tool is not supported - Crossmember supporter

09681-31000	This tool is not supported	Windshield molding remover
09681-31400	This tool is not supported	- Glass holder - suction cups
09793-2100	This tool is not supported	
09793-21000	This tool is not supported	Door hing wrench
09853-31000	This tool is not supported	Headliner clip remover
09861-22000	This tool is not supported	- Torsion bar wrench / luggage compartment
09861-31000	This tool is not supported	Windshield molding remover
09861-31100	This tool is not supported	Windshield sealant tool
09861-31200	This tool is not supported	Windshield sealant blade
09861-31300	This tool is not supported	- Calking gun
09861-31400	This tool is not supported	
09880-4F000	Use 09880-4F000A	
09900-11000	Use the GDS	
0K011 171 002	This tool is not supported	- Guide pin
0K011 190 008	This tool is not supported	- AT seal puller
0K011 270 A02	Part of 0K900 175 AA1	- Not supported
0K011 430 017	This tool is not supported	- Bearing / Gear puller
0K130 111 002	Ring gear Brake (holder)	This tool is not supported
0K130 111 004	Coupling flange holder	- This tool is not supported
0K130 160 007	This tool is not supported	- Engine Stand
0K130 160 010	This tool is not supported	- Clutch alignment
0K130 170 012	This tool is not supported	- Bearing remover
0K130 171 013	Bearing puller	- This tool is not supported
0K130 175 008	This tool is not supported	- Fan pulley boss puller
0K130 175 011A	This tool is not supported	- Transaxle hanger
0K130 175 A02	Part of K94A-4200-T	
0K130 175 A11	Part of 0K900 175 AA1	- Not supported
0K130 175 A13	Part of 0K900 175 AA1	- Not supported
0K130 175 AA0	Use K94A-4200-T	
0K130 191 034	Idler gear shaft holder	- This tool is not supported
0K130 191 A05	Part of K94A-4200-T	
0K130 191 A07	Part of K94A-4200-T	
0K130 283 021	Use 0K670-321-019 or	Tie rod / ball joint separator from outside source
0K130 322 020	Bearing preload tool	- This tool is not supported
0K130 430 017	Use 09581-11000	
0K130 430 019	This tool is not supported	- Flare nut wrench
0K130 990 007	This tool is not supported	- Engine stand
0K201 120 005	Use K95B-1001-E	
0K201 120 011	This tool is not supported	- Valve guide installer
0K201 170 AA0	Use 0K201 170 AA0A	
0K201 170 AA1	This tool is not supported	- Seal installer
0K201 171 A01	Part of 0K900 175 AA1	- Not supported
0K201 172 008	This tool is not supported	- Bearing splitter
0K201 190 016	Leak checker	- This tool is not supported
0K201 190 017	Seal installer	- This tool is not supported
0K201 190 019	Turbine shaft holder	- This is not supported
0K201 190 AA1	Compressor set	- This tool is not supported
0K201 270 014	This tool is not supported	- Side gear holders
0K201 323 021	Use K94A-4205-MT	
0K201 323 AA0	Use K94A-5100-PS1	
0K201 323 AA1A	Use K94A-5100-PS1	
0K210 332 AAO	K94A-5100 PS	
0K230 322 020	This tool is not supported	- Engine support adaptor
0K2A1 131 001	Use K99U-2200-E	
0K2A1 131 AA1	Use K99U-2200-E	
0K2A1 189 A35	Use K99U-2103-G17	
0K2A1 189 B55	Use K99U-2104-G17	
0K2A1 189 B88	Use K99U-2106-G17	
0K2A1 189 M76	Use K99U-2105-G17	
0K2A1 341 001(A)	This tool is not supported	- Strut spring compressor -
0K2A1 342 AA0	This tool is not supported	- Bushing exchange set
0K2A1-131-001A	K99U-2200-E	
0K2CA 089 AA0	Use GDS	

0K2CA 089 HSP	Use GDS
0K2CA 120 001	Part of 09222-3k000A
0K2CA 120 AA0	Use 09222-3K000A
0K2CA 190 AA1	Spring retainer assembly - This tool is not supported
0K2CA 190 AA2	Servo piston lifter - This tool is not supported
0K3MS 131 001	Use TKET104A or FPG2211-ADP
0K410 111 012	This tool is not supported - Pilot bearing puler
0K590 111 001	This tool is not supported - Ring Gear/engine stopper
0K590 111 004	This tool is not supported - Ring Gear/engine stopper
0K670 990 AA0	This tool is not supported - Universal puller / bearing installer
0K710 101 002	This tool is not supported - Engine stand adaptor
0K710 110 010	This tool is not supported - Piston Pin Installer
0K900 175 A01	Use K94A-4200-T1 - Part of K94A-4200-T
0K900 175 A02	Use K94A-4200-T2 - Part of K94A-4200-T
0K900 175 A03	Use K94A-4200-T3 - Part of K94A-4200-T
0K900 175 AA0	Use K94A-4200-T
0K900 175 AA1	This tool is not supported - Bearing installer set
0K930 331 AA0	This tool is not supported - Wheel hub puller
0K930175 AA0	This tool is not supported - Bearing puller
0K993 120 001	Use 09222-28000
0K993 120 004	Use TKET065A
0K993 120 006	Use 09222-29000
0K993 270 A08	This tool is not supported - Gauge block
0K993 270 A09	This tool is not supported - Drive pinion height adjuster
0K993 270 A10	This tool is not supported - Drive pinion model
0K993 270 A14	This tool is not supported - Adjusting nut wrench
0K993 331 016	This tool is not supported - Oil seal installer
0K9A4 263 001	This tool is not supported - brake piston wrench
0K9A4 400 001	This tool is not supported - O2 sensor socket
0K9A4 430 001	Use 0K993 430 032
0KK30 101 001	This tool is not supported
0KK30 140 001	Oil Pressure gauge - this tool is not supported
A35	Use K99U-2103-G17
B55	Use K99U-2104-G17
B88	Use K99U-2106-G17
J28467-B	Use 0K201 170 AA0A
K95B-4102-MT	This tool is not supported - Seal installer
K95B-4110-ATT	Part of K95B-4110-MT
K95B-4111-MT	This tool is not supported - Blind hole puller
K95B-5000-D	This tool is not supported - Bearing installer
K95B-5001-D	This tool is not supported - Bearing installer
K95B-5004-D	This tool is not supported - Bearing installer
K95B-5007-D	This tool is not supported - Carrier measuring tool
K95B-5013-D	Use K95B-5009-D - Sortage shows wrong number for this tool
K95U-0001-G	Use K94U-0001-G
M76	Use K99U-2105-G17
OK210 332 AAO	K94A-5100 PS
OK2A1-131-001A	K99U-2200-E
OK3MS 131 001	Use TKET104A or FPG2211-ADP
OLS-040U	Use OLS-128U
OLS-099U	Use OLS-129U
OLS-101U	Use OLS-130U
TCLE020AB	Use TCLES020A (includes A & B) Order through Kia Parts
TCLE020C	Use TCLES020C Order through Kia Parts
TKET104A	Use FPG2211-ADP
TKZE014A	Use TKZE041A Dummy